

Installation Instructions

Kit Wireless Router 26704801

These instructions outline the procedures to install a wireless router in your NGX Jukebox.

Tools Required

11/32 nut driver.

Parts Included with this Kit:

<u>Item #</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1	28280004	Wireless Router	1
2	22323701	Router Mounting Bracket	2
3	70093401	½" Cable Clamps (Not Shown)	2
4	87843000	#8-32 Nuts (Not Shown)	4
		These Instructions	

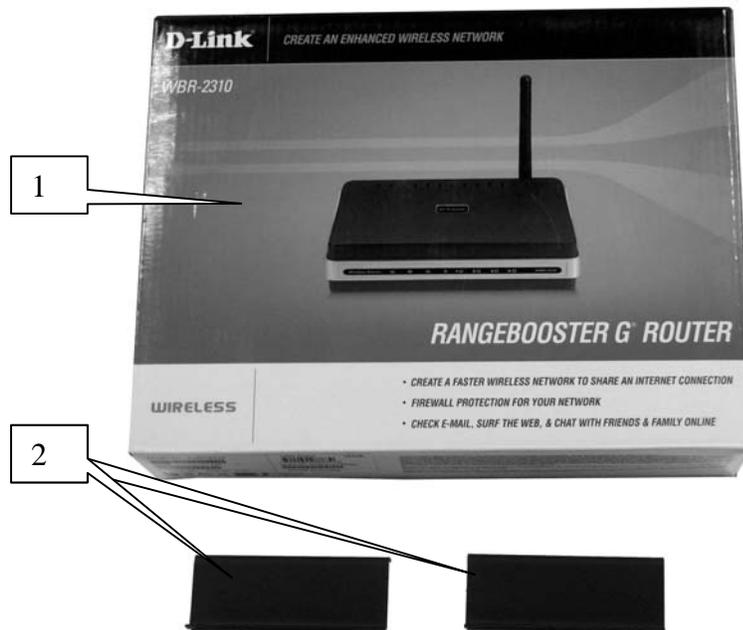


Figure 1

1. Turn the jukebox power off and unplug the power cord from the wall outlet.
2. Loosely attach one of the Router Mounting Bracket with two #8-32 nuts to the lower set of studs in the upper right corner of the jukebox cabinet.
3. Place the Wireless Router into the lower bracket with the antenna oriented to the right, attach the second router mounting bracket with two #8-32 nuts to the upper studs and tighten the four nuts to secure the router in place.
4. Plug the router power adapter into the 40984301 Power Distribution plug labeled “ROUTER”. Route the other end above the amplifier and plug into the wireless router.
5. Plug the blue ethernet cable into the “LAN 1” connector of the wireless router, route the other end down the to the network connection of the computer core as shown in figure 2. Route the blue ethernet cable behind the baffle to insure the cable does not interfere with the locking mechanism. Use the two cable clamps provided in this kit as needed.
6. Connect your high speed Internet connection to the “WAN” port of the wireless router. Refer to the Network Setup Manual for further connection information.

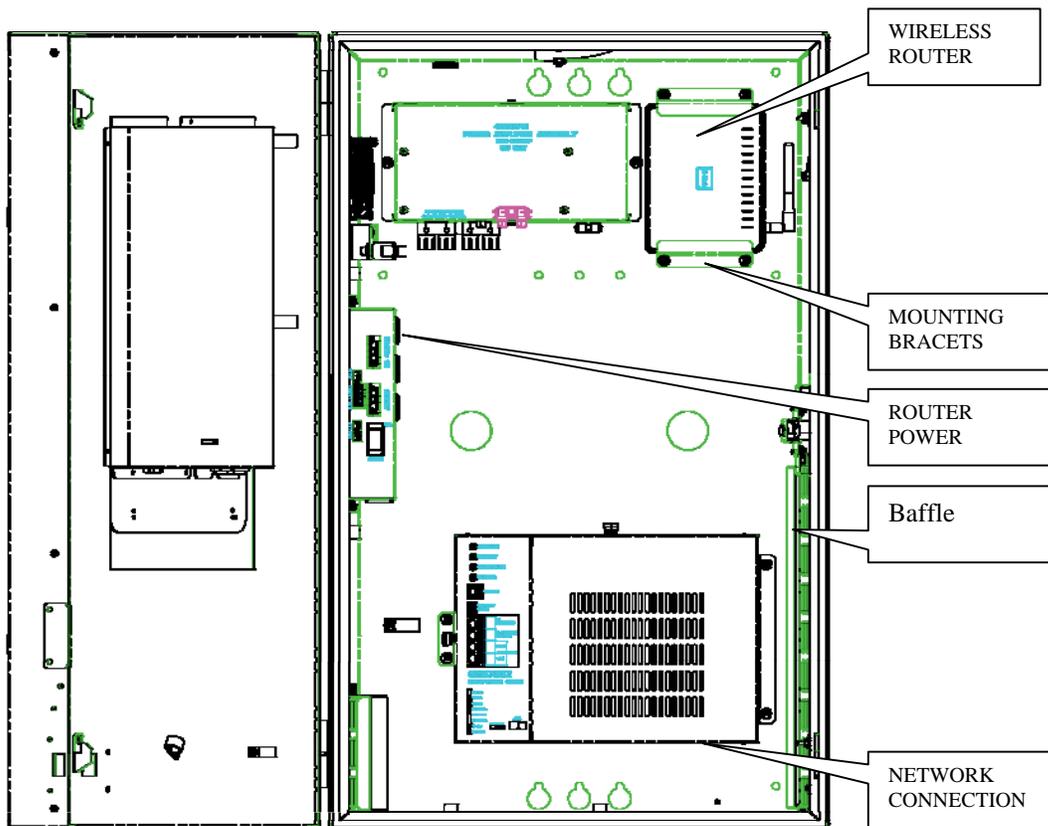


Figure 2