

Installation Instructions

Rock-Ola® DA8 Bubblers Credit Card Reader Kit #26677528

This kit contains the parts and instruction to replace the existing card reader with an encrypted swipe card reader.

Tools Required

- #2 Phillips Head Screwdriver
- ¼ nut driver

Parts Included with this Kit

<u>Item #</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1	22329301	Back Plate - Credit Card Reader	1
2	34091603	Spacer - Credit Card Reader	1
3	22185303	Card Reader - Swipe	1
4	28277901	Screw - M3	2
5	80442304	#6-32x1/4 Screw	5
6	22000225	These Instructions	1
7	22207602	Label - Credit Card Reader	1
8	87842300	#6-32 Nut	2

Instructions

1. Turn the jukebox power OFF, unplug the Power Cord from the wall, and open the jukebox door.
2. The Credit Card Reader Kit will be replacing the existing card reader at this location. See Figure 1.

Location of the Credit Card Reader



Figure 1

Remove the existing Credit Card Reader. See Figure 2.

- A. Remove the two nuts securing the Credit Card Reader and set aside. (Remove the Card Reader. See Figure 2.)

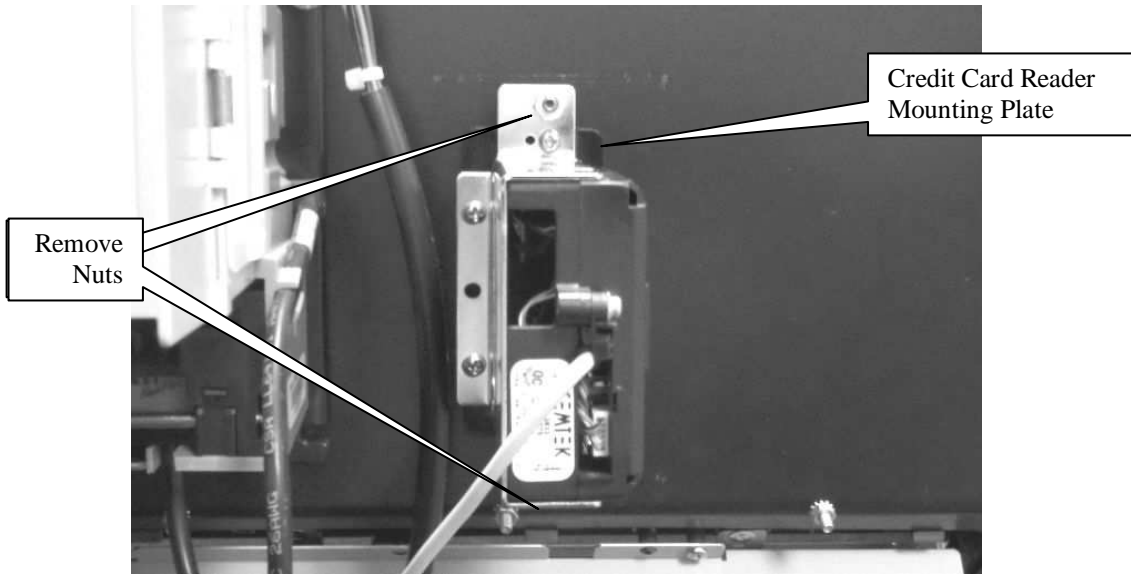


Figure 2

3. Fasten the Swipe Card Reader (Item #3) to the Credit Card Reader Spacer (Item 2) using the two M3 Screws (Item #4). See Figure 3.

Note: Orient the Swipe Card Reader so the USB Cable feeds through the cutout on the Spacer (Item 2). See Figure 3.

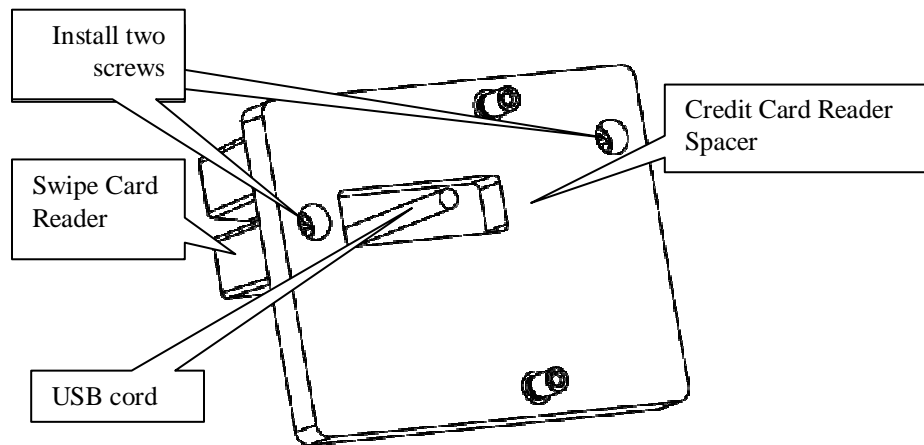


Figure 3

4. Install the Credit Card Reader Label (Item #7).
 - A. Install the Credit Card Reader Label on the Spacer as shown in Figure 4.

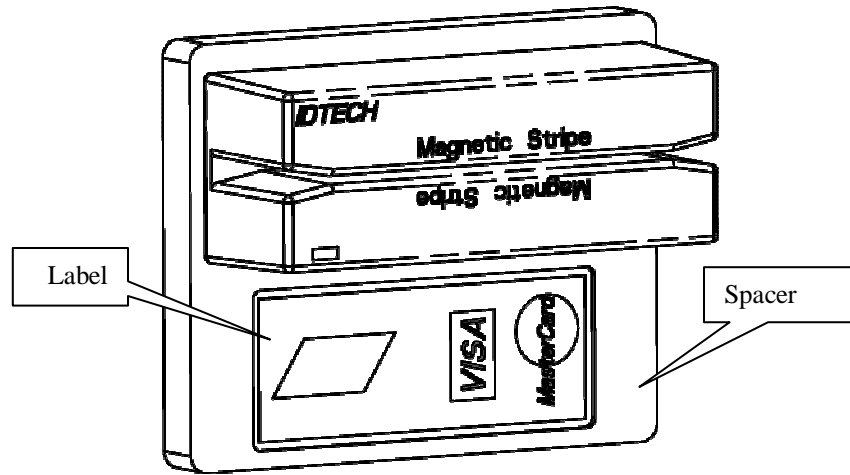


Figure 4

5. Install the Back Plate (Item 1) to the back of the door using two #6-32 nuts (Item 8) as shown in Figure 5.

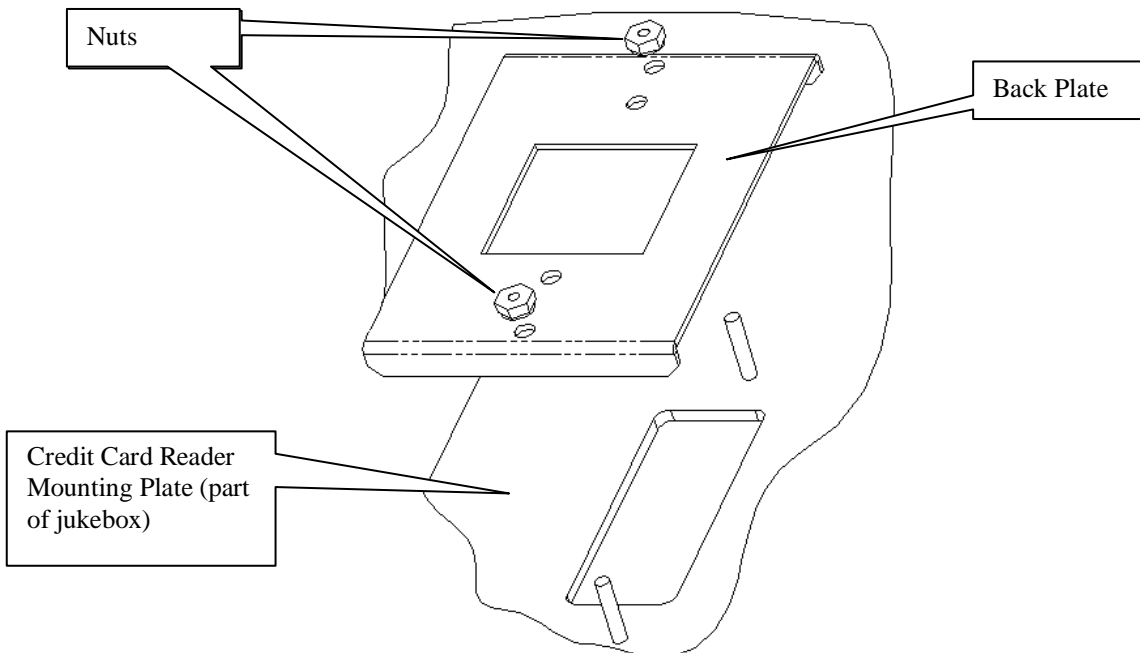


Figure 5

6. Install the Credit Card Reader Spacer with the Swipe Card Reader attached.
 - A. From the outside of the Door, feed the USB Cable from the Card Reader/Spacer, through the rectangular cutout on the Back Plate. See Figure 6.
 - B. Place the Card Reader/Spacer onto the Mounting Plate and fasten (from the back of the door) using two screws provided with this kit (Item 5). See Figure 6.
 - C. The Swipe Card Reader is now installed. See Figure 6.

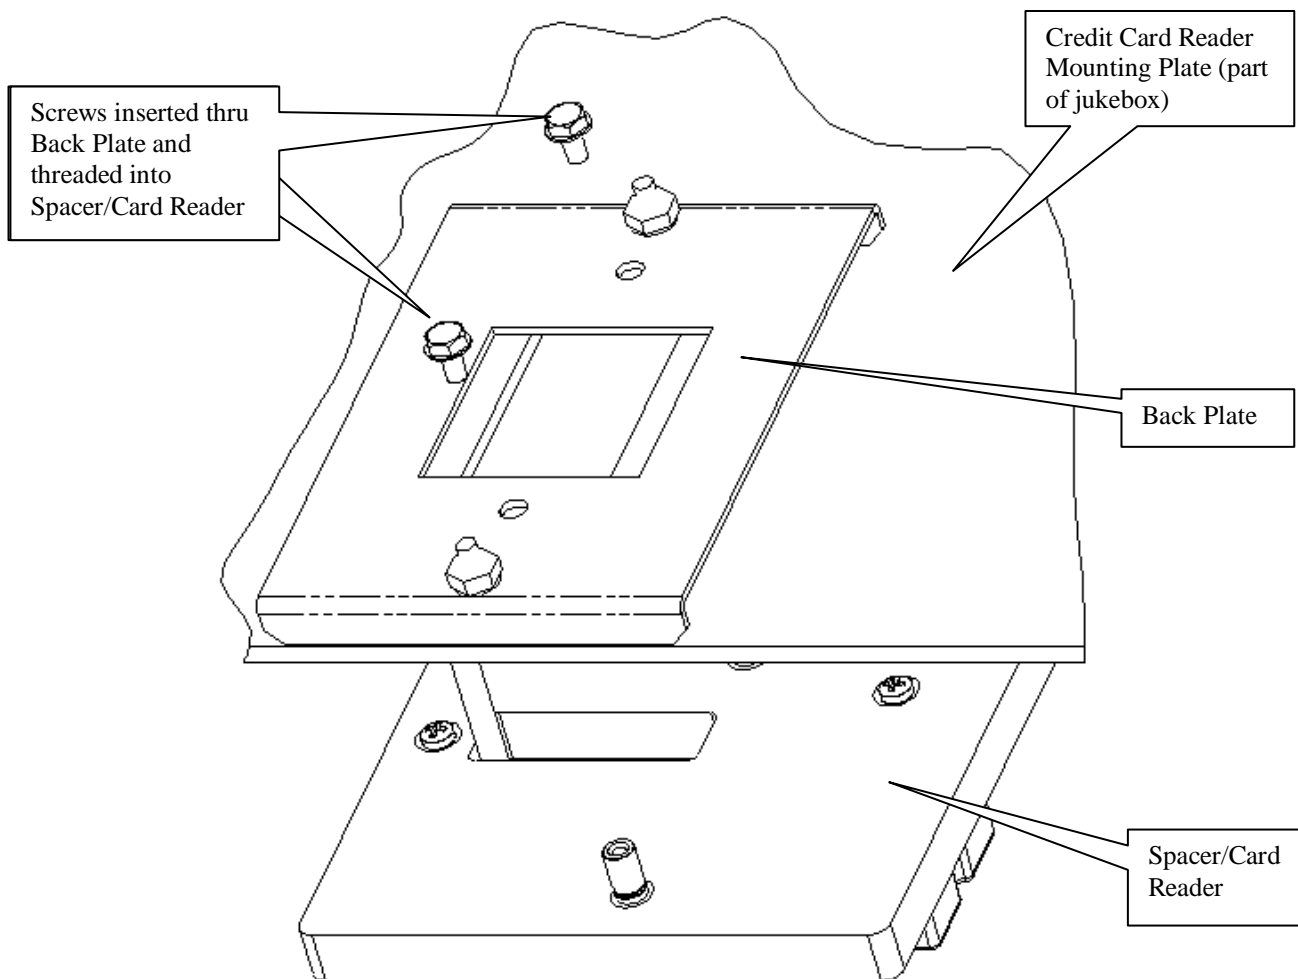


Figure 6

7. Route the USB Cable from the Door into the Cabinet through the Cable Clamps and over to the Rowe CPU Assembly. Plug the USB Cable into the USB Jack closest to the rear of the Cabinet (You may need to temporarily remove the Ethernet cable to make the installation easier).
8. Power Up and Operational Check

Note: The jukebox must have software Version V3.2.1 or higher and have a Broadband connection to the server for credit card acceptance to function.

Power ON the jukebox and wait for the User Interface (Selection Screen) to come up. Swipe a valid credit card through the Card Reader. If the Card Reader is connected properly, the jukebox screen will display a pop-up window similar to the one shown in Figure 8.



Figure 8

Touch the Cancel Button to close the window and cancel the credit transaction.

9. Change the Attract Loop to Highlight Credit Card Acceptance

Enter the Service Mode by pushing service on the Rowelink Controller. Touch “Location/System Setup” then touch “Attract Mode”. Touch “Default Loop with Credit Card” from the list to select it.

