## **Installation Instructions**

## **Dual NRI Coin Kit for NGX Kit 26685003 and 26685005**


This kit contains the parts and instructions to install a second NRI coin acceptor in an NGX Mini 2 Jukebox.

## **Tools Required**

#2 Phillips Head Screw driver, 11/32" Nut Driver

Parts Included with this Kit (see page 3)

Item	Part #	Description	-03	-05
			Quan	Quan
1	41023309	BRKT & PANEL ASSY - 1BA, 2CA, CC	1	1
2	40935204	BOX-COIN	1	1
3	40992404	RETAINER-COIN BOX	1	1
4	22132290	HARNESS-DUAL COIN (NRI)	1	1
5	22325101	PLATE-MTG (NRI COIN)	1	1
6	87842300	#6-32 NUT, KEPS HEX STD CSZP	4	1
7	70134153	#6-32 X 1" PIN IN TORX SCREW	4	4
8	22324501	WRENCH-LKEY PIN IN TORX T10	1	1
9	87843000	#8-32 KEPS HEX MS NUT	2	4
10	22178612	COIN ACPTR-NRI CAD 4 COIN	1	
11	26685053	INST INSTR-KIT DUAL COIN NRI MINI2	1	1

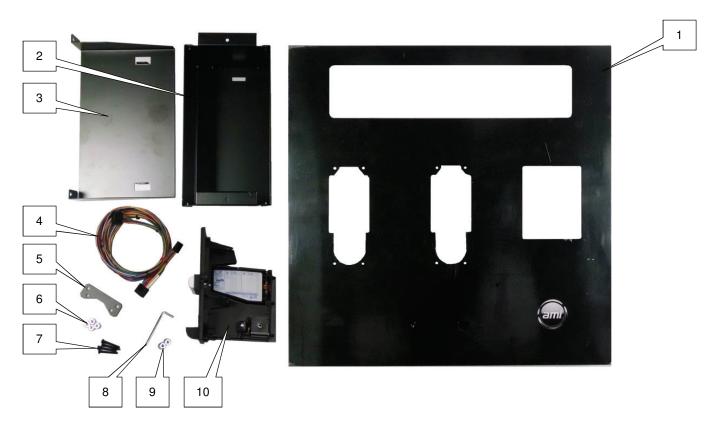

The Dual Coin kit adds a second NRI coin acceptor and larger coin box to an NGX Mini 2 Jukebox.

1


26685053 Rev A

- 1. Power off the jukebox.
- 2. Remove the NGX Mini 2 currency panel as follows
  - a. Unplug the harnessing from the bill acceptor, credit card reader, coin mech, and logo back light panel.
  - b. Remove the credit card reader, coin mech, coin mech bezel and bracket.
  - c. Remove the (4) Hex head screws holding the currency panel to the NGX Mini 2 door. Carefully remove the currency panel door from the front of the Mini 2.
  - d. Remove the bill acceptor or bill acceptor block out plate from the currency panel.
- 3. Replace the single coin acceptor Graphic Panel with the dual coin acceptor Graphic Panel.
  - a. Remove the (2) hex nuts then remove the graphic back light panel, clear spacer panel, and graphic insert from the original currency panel.
  - b. Remove the hex nut holding the clamp on the logo back light panel. Remove the back light panel and LED strip.
  - c. Remove any other nuts and cable clamps on the back of the currency panel. Carefully lift off the spacer panel.
  - d. Transfer the items from step 3a, 3b and 3c to the new currency panel (item 1). Install them in the reverse order.
  - e. Remove the protective film from the front of the new graphic panel.
  - f. Install the new currency panel into the NGX Mini 2 door. Secure with the (4) screws from step 2c.
  - g. Install the coin box retainer bracket (item 3) using (2) #8-32 nuts (item 9).
  - h. Reinstall the coin mech, credit card reader, bill acceptor or bill acceptor block out plate. Install the second coin mech using mounting plate, Torx screws and (4) nuts (items 5, 6, and 7).
  - i. Reconnect the wire harnessing to all components except the coin mechs. Using the new dual coin mech harness (item 4), connect the harness to both coin mechs.
  - j. Disconnect the COINS plug from the core computer. Position it out of the way.
  - k. Route the dual coin mech harness up through the wire clamps into the jukebox cabinet and plug it into the COINS connector on the core computer.
- 4. Inspect all wiring to be sure connectors are properly installed and there are no pinched wires. Ensure all components are properly reinstalled.
- 5. Power up the jukebox.

Test the coin mechs by going to the Credit Device Test screen in the Service Mode. Drop coins through both coin mechs and confirm the correct credit is recognized for each coin.

2

26685053 Rev A

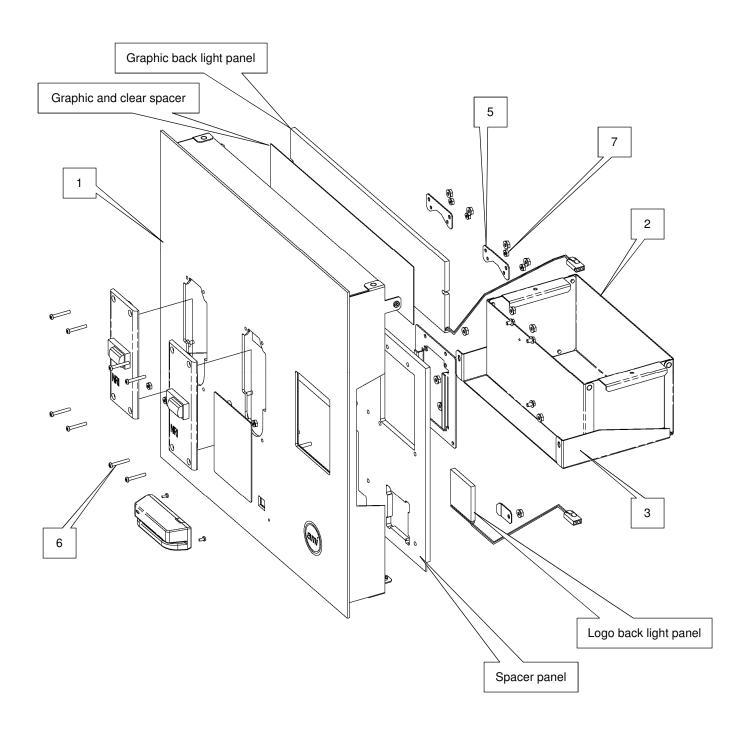

3 26685053 Rev A

