

Installation Instructions

Special Event Switch Kit for NGX Infinity Kit #26681502

This kit adds a (“Special Event”) keylock switch to your NGX Infinity Jukebox that will allow a location to suspend normal jukebox operations while the audio from an external source is played through the jukebox Sound System. The Touchscreen and Bill Acceptor(s) are disabled during the Event.

Tools Required – 3/8” Nut Driver, Philips Screwdriver, 7/8” Deep Well Socket, Socket Wrench

Parts Included with this Kit:

| Item # | Part Number | Description | Quantity |
|--------|-------------|-------------------------|----------|
| 1 | 34038212 | Harness – Special Event | 1 |
| 2 | 21621402 | Switch – Key | 1 |
| 3 | 26681552 | These Instructions | 1 |

1. Power off the jukebox and unplug it from the wall. Open the UI Panel door.
2. Locate the carriage bolt, nut, and washers installed on the right side of the cabinet just under the primary amplifier. Remove the bolt, nut, and two washers.
3. Install the switch (item 2) from the outside of the cabinet and secure from the inside with the nut included with the switch.
4. Locate the 14 pin housing labeled “Jukebox” plugged into the bottom of the core computer. Unplug the housing and then one by one, insert the two pins attached to the wire harness (item 1) into the housing at pins 8 and 9. See the diagram to the right for more detail. Be sure the tabs on the contacts are facing out so they lock into the holes in the connector housing.
5. Plug the connector back into the core computer. Route the free end of the wire up behind the core computer to the top of the compartment then clip it into the cable clamps along the top all the way to the right side, then down following the existing harness.
6. Connect the two spade connectors on the wire harness to the switch terminals. It doesn’t matter which color wire goes to which terminal.
7. Power up the jukebox and check operation of the special event switch. When the switch is active, the jukebox monitor will display the image shown to the right, AMI Special Event. Any selection that was playing on the jukebox will be cancelled. While Special Event is active the Bill Acceptor(s) will be disabled, the Touchscreen will not respond, and the amplifier will unmute and enable the Auxiliary Audio mode.

