

Installation Instructions

NGX Ultra Computer Core Replacement Kit Kit #26723301

The VGA and HDMI ports on the I/O panel of the 61197020 Computer Core are located in a different position than previous Computer Cores. The video cables that plug into the VGA and HDMI ports will interfere with the Power Distribution Unit in the NGX Ultra when installing a 61197020 Computer Core.

In addition to the new Computer Core, this kit contains the bracket required to relocate the Power Distribution Unit slightly lower in the cabinet providing clearance for the video cables.

Parts Included with this Kit:

Item #	Part Numbers	Description	Quantity
	Kit 26723301		
1	61197020	Computer Core (H310, Win10)	1
2	34124201	Bracket – Adaptor, Power Distribution	1
3	87843000	#8-32 KEPS Hex Nut	1

1. Power off your jukebox and unplug it from the wall.

CAUTION: Be sure to unplug the power cord before installing the adaptor bracket.

2. Locate the Power Distribution Unit and remove the two hex nuts securing it to the cabinet. Retain the nuts.
3. Loosen the nut holding the cable clamp directly above the Power Distribution Unit.
4. Carefully slide the adaptor bracket in behind the Power Distribution Unit. Align the slot in the top of the bracket under the cable clamp above the Power Distribution Unit and fit the bracket over the two mounting studs that held the Power Distribution Unit.
5. Tighten the nut holding the cable clamp. Install the #8-32 KEPS Hex Nut (item #3) on the left hand stud. Leave the right hand stud open.
6. Position the Power Distribution Unit over the two studs on the adaptor bracket (item #2) and secure it to the adaptor bracket using the two nuts retained from step 2.
7. Remove and replace the Computer Core with the new core (item #1).
8. Check that all connections are correct and secure. Plug the jukebox back in the wall. Power up and confirm proper operation of the jukebox.

