

Installation Instructions

Fan Kit #26731003

These instructions outline the procedures to install cooling Fans in your WP-100 Wall Phono that has been fitted with a Jump™ Kit.

Tools Required

1/4 Nut Driver, 5/16 Nut Driver

Parts Included with this Kit

	Part Number	Description	Quantity
1	40928403	Fan Assembly	1
2	34065103	Circuit Board Assembly with 12V	1
3	34039920	Fan Power Harness Assembly	1
4	80443006	#8-32 x 3/8 Hex Screws	4
	22010403	These Instructions	1



Figure 1



Instructions

1. Open the front door and enter the Service mode. Press the “Shutdown Jukebox” Icon and allow the Computer to finish it’s shutdown sequence. Unplug the power cord from the wall outlet.
2. Disconnect all of the harnessing to the computer core as shown in figure 2. Release the detent bar and gently slide the computer core forward until it is aligned with the guide. Lift the core assembly up and out of the Jukebox.

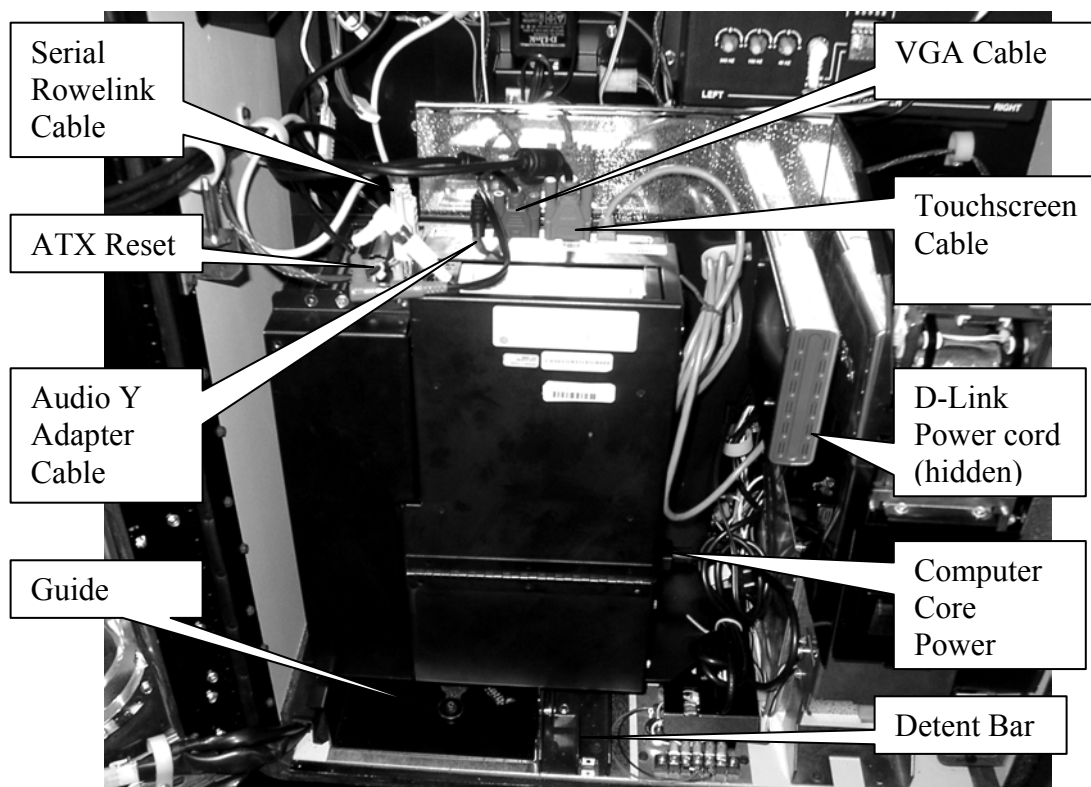


Figure 2

3. Locate the Interconnect circuit board assembly which is mounted to the left side of the Rowelink Controller. Disconnect all of the harnesses, and remove the interconnect board from the jukebox. Using the existing hex nuts mount the new interconnect circuit board assembly (Item 2) supplied with this kit. Reconnect all the harnesses previously removed. Refer to Figure 3

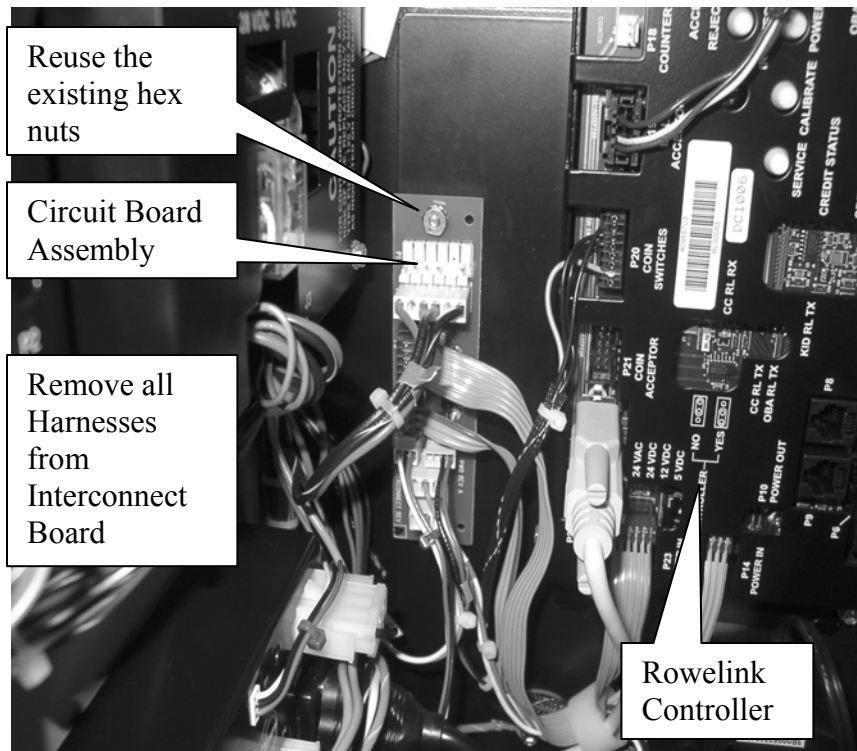


Figure 3

4. Locate the Rear Panel Cover directly behind the now removed computer core assembly. Remove the four screws as shown in Figure 4. The rear panel and the screws will not be reused.

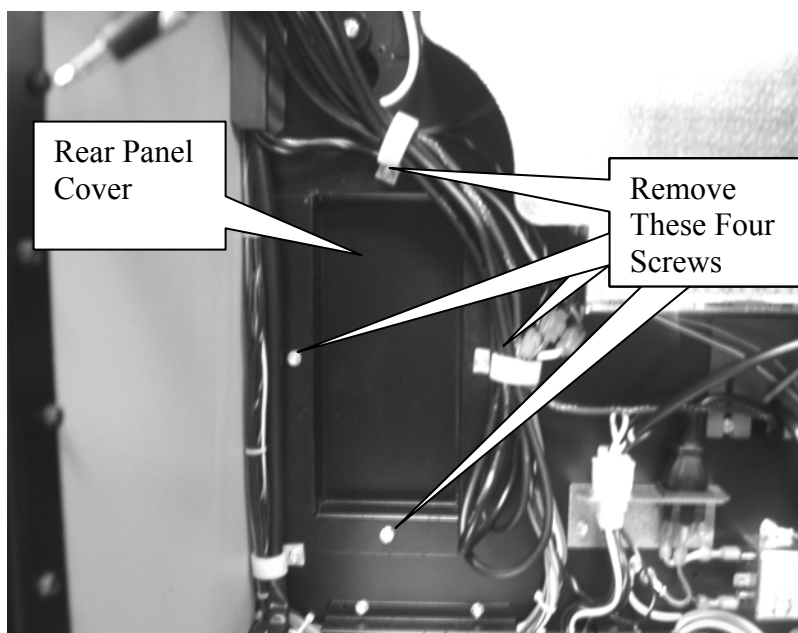


Figure 4

- Loosely install two #8-32x3/8 screws (Item 4) provided with this kit. Install the Fan Assembly (Item #1) over the screws and down into the slots. Install the other two screws and cable clamps as shown in Figure 5. Tighten all four mounting screws and route the fan harnesses through the cable clamp. See Figure 5.

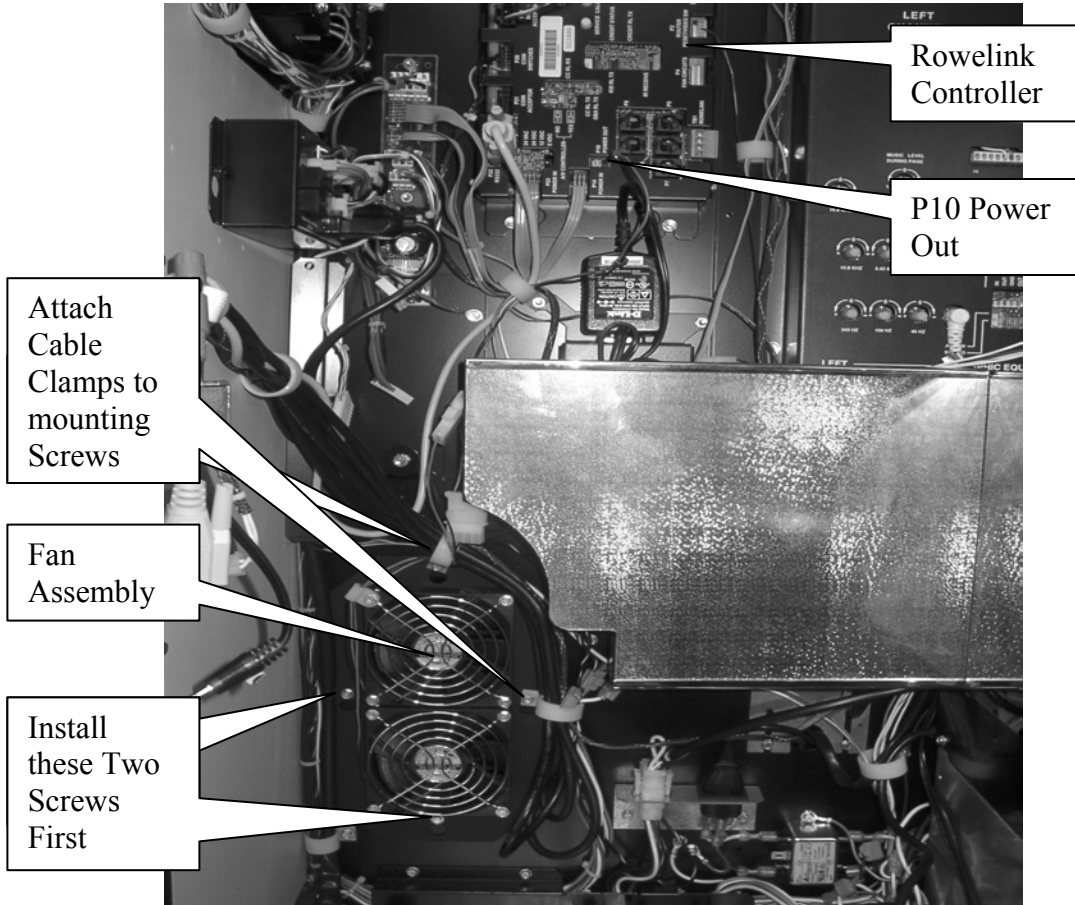


Figure 5

- Connect the Fan Assembly connectors (two 4 pin connectors) to the Fan power harness (Item #3). Route the fan power harness through all available cable clamps to the "P10 Power Out" header of the Rowelink Controller. See Figure 5.
- Reinstall the computer core and connect all of the harnesses removed in step # 2. See Figure 2.
- This kit installation is now complete, turn the power on and check for proper operation. The fans should run continuously.



This page intentionally left blank.



