


# Installation Instructions

## Alternate Power Supply for Video Splitter Kit – 26736001

The power supply in this kit is used to power the Video Splitter in the NGX Curve jukebox.

### Parts Included with this Kit:

<u>Item #</u>	<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1	28290708	Power Supply – Video Splitter	1
2	70800101	Wire Tie	1
3	26736051	These Install Instructions	1

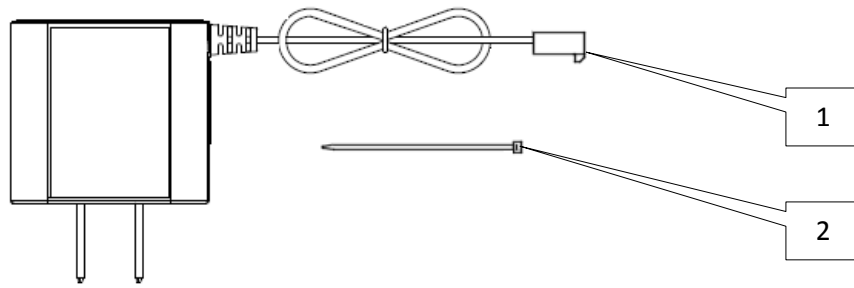

1. Power off the jukebox.
2. Locate the 34117404 Video Splitter on the back of the front door. Unplug the two pin power plug and tie it off to the wire harness using Item #2, wire tie.
3. Plug the power supply, Item #1 into the Router outlet on the Power Distribution Assembly in the lower left corner of the jukebox cabinet.
4. Route the power supply wiring up and over to the Video Splitter on the door using the jukebox cable clamps to secure the wire.
5. Plug the power supply wire into the Video Splitter.
6. Power up the jukebox and test for proper operation.

Note: The Router outlet on the power supply is a constant source of AC power as long as there is a good Internet connection. If the Internet connection is lost, the Router outlet will automatically power cycle off, then back on, once every 30 minutes. This will cause the upper NGX Curve monitor and any external monitors connected to the splitter to momentarily go black. Normal video will resume within a few seconds.

